




Salt City Records


AURORA

QUIK-LOK® Sliding Doors

76-1/4" and 88-1/4" High
ASSEMBLY INSTRUCTIONS NO. 3503

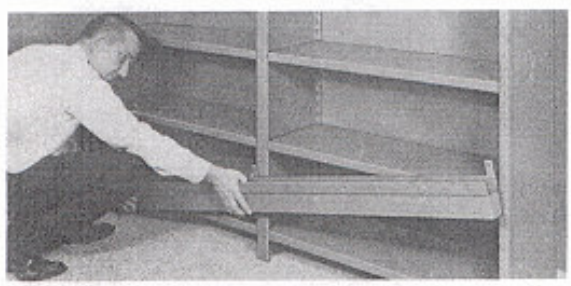

1 Swing bottom track into position, taking care to hook clips around posts, and lock down firmly with setscrew.

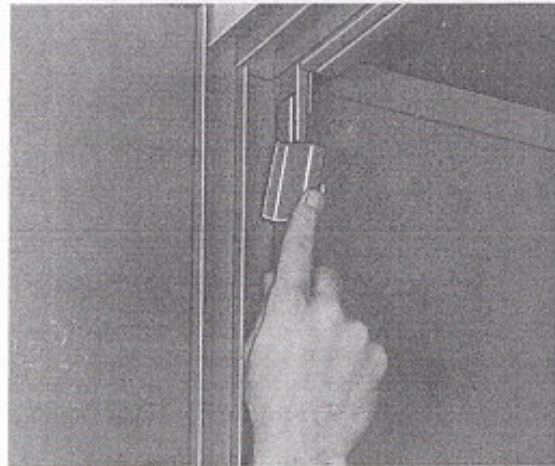

4 Secure jamb by pressing steel clips over edge of post and flange of jamb—one at top and one at bottom—then adjust screws in clips finger tight.




2 Drop top track in position by inserting prongs inside hollow uprights.

← Top track = 1/4" over shelving




3 Put on left side jamb by hooking top flange of side jamb over top track, and pressing jamb flush with post. (Note: Left side jamb always has two channels. Right side jamb always has one.)

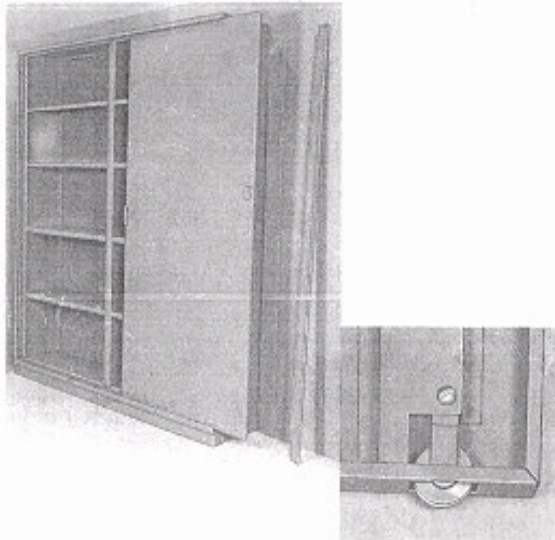

5 Start left-hand door on track by resting grooved rollers (see inset) on knife edge. Leave door overhanging track slightly so that next door may be moved past the locking clip located at the right edge of the left-hand door.

NOTE! It is recommended that all units be anchored to the floor or wall to prevent accidental tipping.

Step 2.
Install TS shelf supports at the very bottom and very top of the shelving unit. Figure 11 and 12

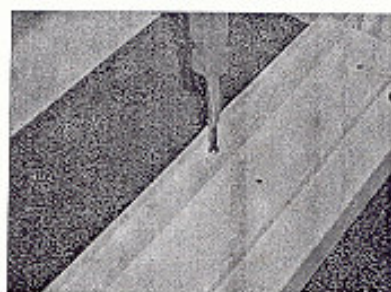

Step 3.
Install the bottom jamb under the bottom shelf support. Figure 13 and 14. Two sets of holes are provided to bolt the bottom jamb to the shelf support. If extenders are used, the bottom jamb is installed in the outer position. If no extenders are used, the bottom jamb is installed in the inner position. Use (4) #10-24 X 3/8" screws and nuts.

Figure 13

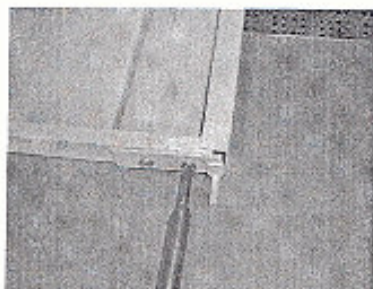


Figure 14

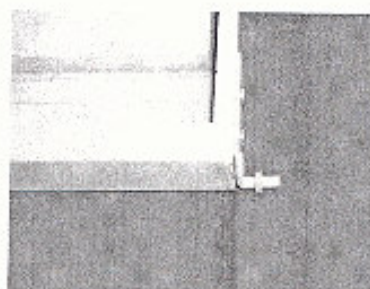


Figure 15


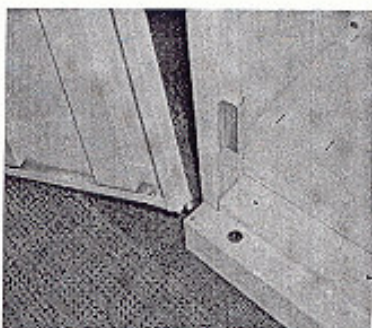


Figure 16

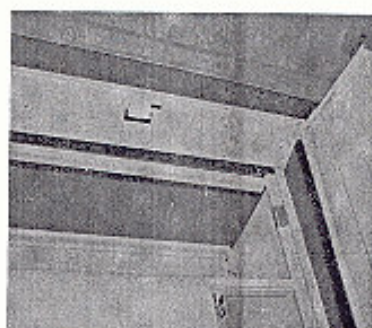

Step 4.
Prepare the doors for mounting by installing the pivot pin plates to the top and bottom of each door. Note that the pin is to be located to the front corner of the door as shown in Figure 15. Use (2) #10-24 X 3/8" screws and nuts on each of the 4 pin pivot plates.

Step 5.
Slide the plastic bushing over the pivot pin at the bottom of each door panel. Figure 16

Step 6.
Stand both door panels upright and insert pivot pin in the hole provided in the front corner of the bottom jamb. Figure 17

Figure 17


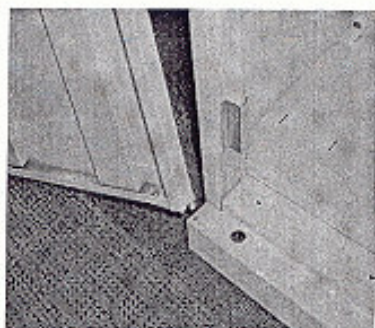


Figure 18




AURORA


SLIDING DOORS 76-1/4" AND 88-1/4" HIGH, continued

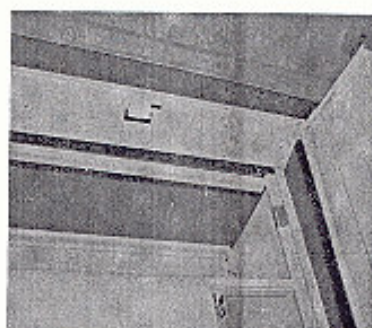

6 Start next door on track.

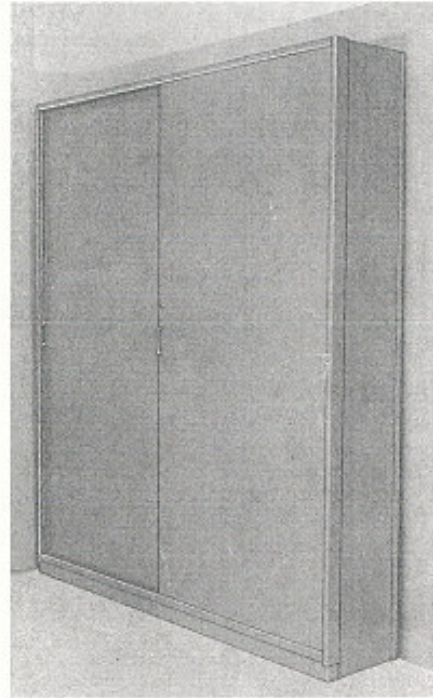

7 Push all doors in position. Install right-hand jamb in same manner as left-hand jamb in illustration three.
Same instructions apply for 2 wide or 3 wide doors.

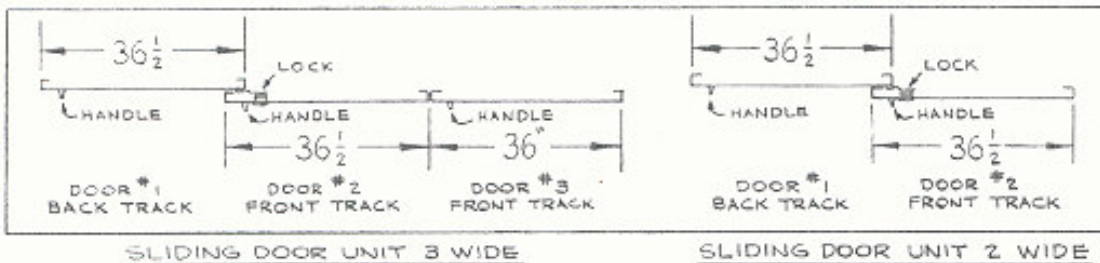

Caution: Doors in each set are slightly different size. (See plan view)

